
## Modular System Elfa 90

## AEG

Add-on Devices and Ad	ccessories				
	Catalogue number	Descrption	Number of modules	Reference number	
	y contact block for Ser H	ies E90 (excluded Series EC90E and Series EC90) and for 1 Auxiliary contact block	non-automatic bre 0,5	akers 676034	
	S/H	1 Auxiliary contact block or tripping-signal	0,5	676035	
	S/HG	1 Auxiliary contact block or tripping-signal	0,5	676036	
	SRH/HH	(gold contacts) 1 Auxiliary contact block + 1 Auxiliary contact block or	0,5	567819	
	3817111	tripping-signal (right mounted)		507819	
	SRH/HH-L	1 Auxiliary contact block + 1 Auxiliary contact block or	0,5	676037	
		tripping-signal (left mounted)			
		contact block for Series EC90E and Series EC90 (COMPAC		670077	
	CAH CAS/H	1 Auxiliary contact block 1 Auxiliary contact block or tripping-signal	0,5 0,5	672977 672978	
	E880H E8805/H	Auxiliary contact block for Series E880 1 Auxiliary contact block 1 Auxiliary contact block or tripping-signal	11	671597 671599	
	E880SR	1 Auxiliary contact block + 1 tripping-signal + function TEST, RESET	1	671602	
		Remote release for Series E90 and Series EC90 *			
	NF4 NF5	24-60V AC/16-48V DC 110-415V AC/110-125V DC	1	567820 567821	
12					
	* an auxiliary contact t	ype CAH or CAS/H must be mounted between undervoltage trip	and MCB EC90E, EC9	0 series	
	<b>F</b> /	Remote release for Series E880	-	5/(500	
	F4 F5	24-60V AC/16-48V DC 110-415V AC/110-125V DC	1	546532 546533	
-		Undervoltage trip for Series E00 and Series E000 *			
	NUVR12 NUVR24 NUVR48 NUVR230	Undervoltage trip for Series E90 and Series EC90 * 12V AC - DC 24V AC - DC 48V AC - DC 230V AC	1 1 1 1	676040 676041 676042 676039	
	an auxiliary contact I	type CAH or CAS/H must be mounted between undervoltage trip Miniature circuit breakers interlock	and MCB EC90E, EC9	u series	
	NLSV		0,5	676038	
		Remote drive			
	NFA	230V AC	3	676043	
		Padlocking bracklet			
	KS			624929	
55					
<b>\$ \$</b>					

## AEG

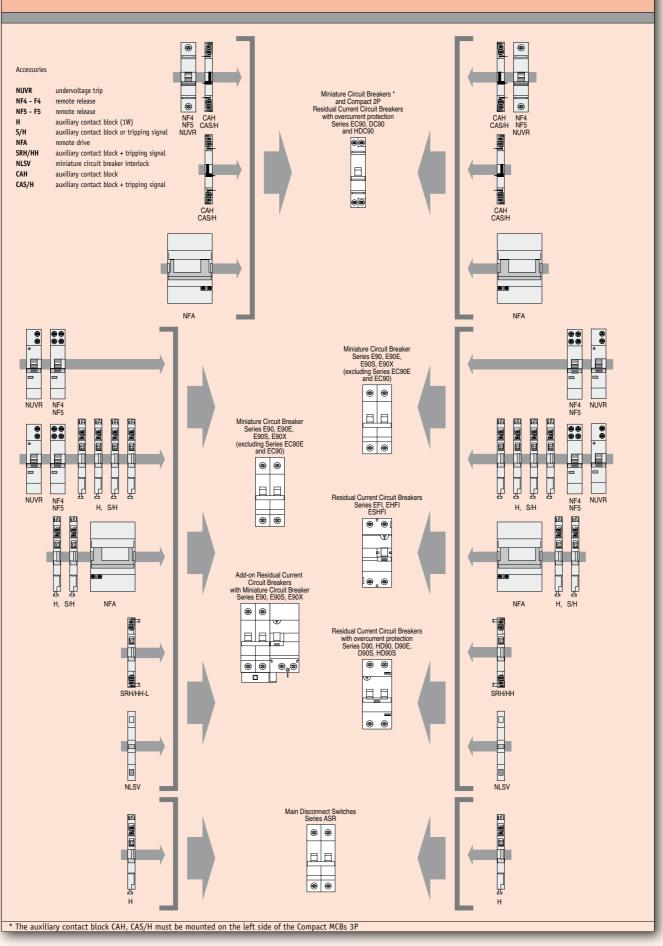



Reference Guide - October 2014